

Material: iglidur® RW370-PF

1. General

The material iglidur® RW370-PF, developed by igus®, was developed and tested solely for the “Fused-Deposition-Modeling” (FDM) manufacturing method.

Iglidur® RW370-PF is challenging to process. A 3D Printer with a high temperature printing nozzle, isolated enclosure and active chamber heating is required.

2) Data for the processing

The optimum processing parameters depend on the various print parameters and on the 3D printers that are used. Therefore, only ranges of values can be specified here (see the figure on page. 2):

- (1) Nozzle temperature: 350 - 360 °C
- (2) Nozzle diameter: 0.4 - 0.6 mm
- (3) Bed temperature: 180 - 200 °C
- (4) Chamber temperature: 160 - 200 °C
- (5) Print speed: 20 - 35 mm/s
- (6) Bottom layer speed: ~ 20 mm/s
- (7) Layer height: 0.2 - 0.3 mm
- (8) Shell-thickness (6.1) to nozzle-diameter (6.2) ratio: >1
- (9) Avoid cooling by fan
- (10) Bed surface:
 - PET foil (e.g. tesa® 50600) (experimental)

3) Further processing instructions:


When feeding the filament, the bends should not be too tight, i.e. the radius should not be less than 40 mm.

Upon processing a 3D printer with integrated exhaust air filtration should be used. Alternatively, suction systems can be utilized. Ensure good ventilation of the surrounding room. In addition, appropriate protective equipment should be used when handling the hot molten mass.

The material should not be heated beyond 365 °C. When heated beyond 370 °C, hazardous decomposition products are generated.

Based on the supplier's experience and the information provided by the supplier, the product has no adverse health effects if properly handled and used in accordance with the intended purpose.

Image: 3D-printer

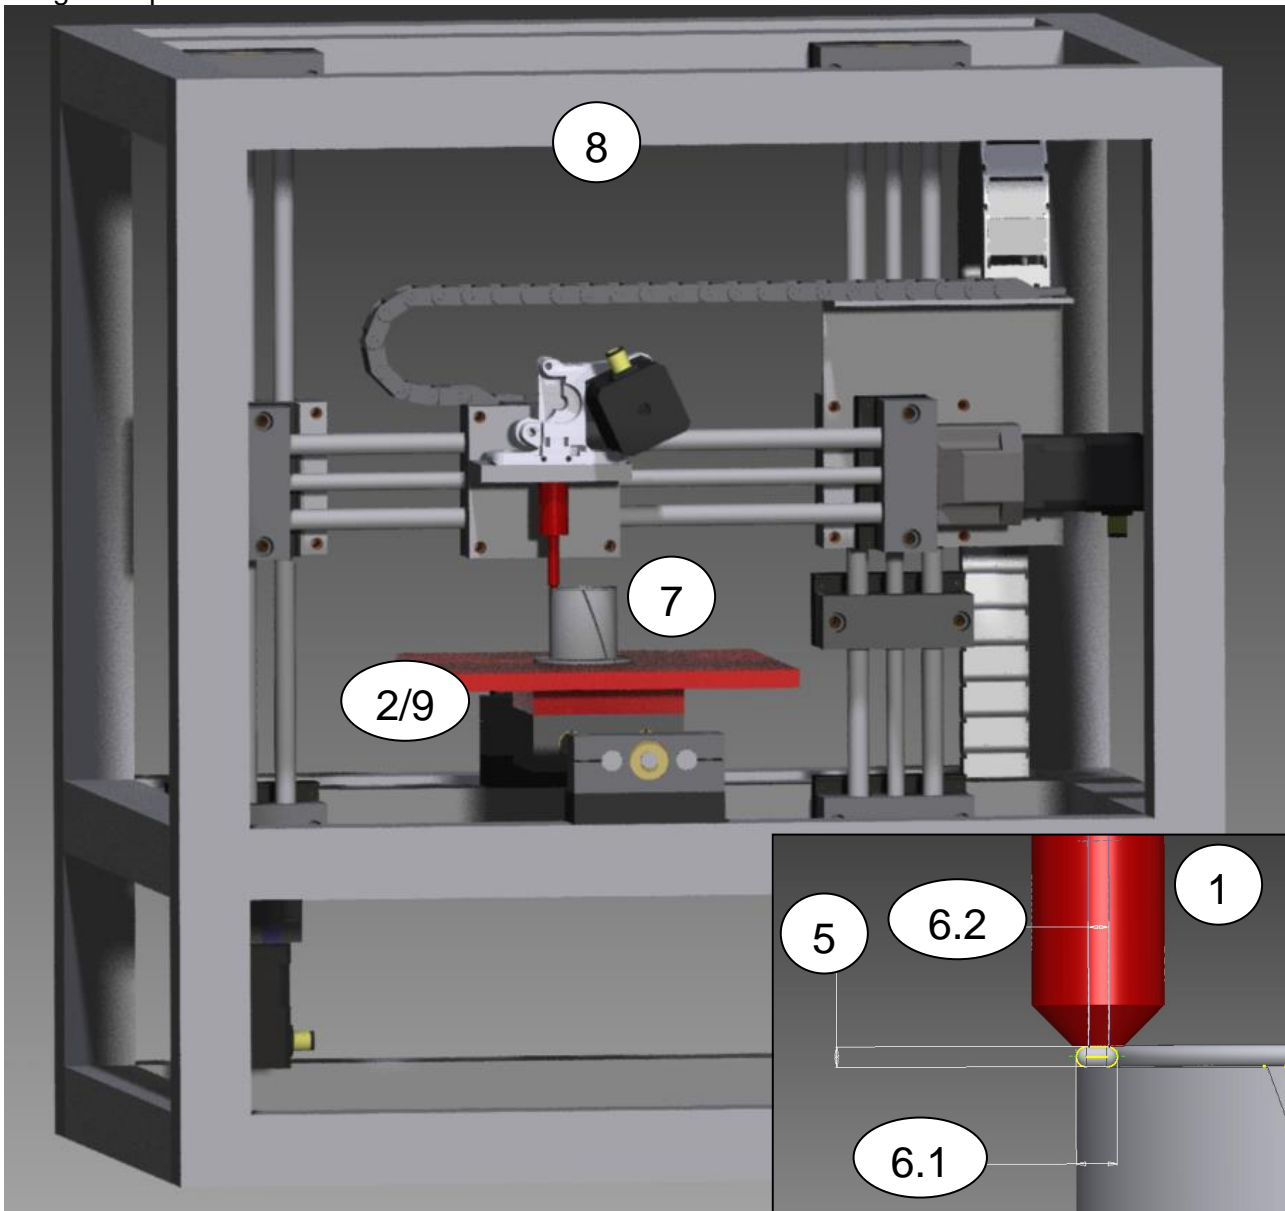

4) FAQ

Where do I find the processing instructions for iglidur RW370-PF tribofilament?

Following the link on our website: <https://www.igus.de/product/18973>

Do I need a heated bed (platform) on my printer?

Yes, for most of the Tribofilament materials a heated bed is necessary, only Iglidur[®] I150 can be processed without heated buildplate (then igus adhesive film is needed).

Does igus[®] offer a filament diameter size of 2.85 mm?

The 3 mm filament is designed to be suitable for printers requiring 2.85 mm. iglidur[®] J350 and iglidur[®] RW370-PF are only available in 1.75 mm.

Where can I get the igus® adhesive foil for the printing-bed?

Following the link on our website: [http://www.igus.eu/Adhesive film for print bed](http://www.igus.eu/Adhesive_film_for_print_bed)

Which Tribofilament is the easiest to process?

Iglidur® I150 is by far the most easily to process Tribofilament. It can even be processed without heated buildplate (then igus adhesive foil is necessary).

Iglidur® I180 is suited for more advanced users, because more conditions need to be considered (e.g. enclosed printer, switched off fan).

Iglidur® I170, Iglidur® J260, and Iglidur® C210 are suited for experts; since they are harder to process.

Iglidur® J350 and Iglidur® RW370 require a special high temperature 3D printer for processing.

The printed part does not stick to the print bed, what can I do?

1. Check the distance between nozzle and print bed. Re-level the platform when necessary.
2. Did you use the correct printsurface? Is the printer enclosed? Check page 1, point 2
3. Increase bed-temperature
4. Try using "Brim" as the adhesion type in your slicer software (normally used for large parts)

The adhesion between printbed and part is too high. How to reduce the adhesion?

Reduce the print-bed-temperature.

Does a running fan (part-cooling) help with the print quality?

All iglidur Tribofilaments are preferably printed with switched off fan.

The layer adhesion or strength at my part is very bad. How can this be improved?

Make sure the fan is off (part cooling) and the printer is enclosed, so that the hot air stays inside the printer.

How can I avoid/ cope with material accumulation on the nozzle?

With large volumetric print jobs, material can accumulate at the nozzle. One way to reduce the issue is to decrease the material infill density to ~ 80-90% and adjust material flow at the printer depending on the print layer appearance. Furthermore, the application of a prime tower as a wipe barrier during every layer can be preferable in some cases.